


Quick Guide:

Lubrication sprocket with spring plate

step 1:

Upon delivery the lubrication roller are pre-assembled

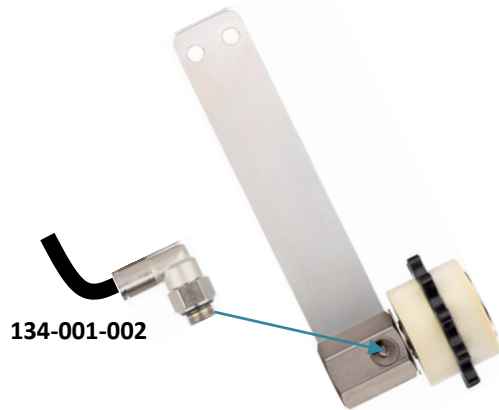

Please screw the fitting into the axis.
The fitting (134-001-201) has to be ordered separately!

install the tubing

Attention:
Cut the hose only with tube cutter.
Push the hose deep (approx. 18 mm) into the fitting.
Remove the hose not more than two time, otherwise you have to shorten the hose about 5mm.

If you don't cut the end, leaks are possible!

step 2:

pre-fill the lubrication roller




Upon delivery, the lubrication sprocket is not pre-filled

Recommendation: put the lubrication sprocket around 2 min in mineral oil. Let the excess oil drain off

ATTENTION: never use the rollers in dry conditions!

step 3:

lubrication roller assembly

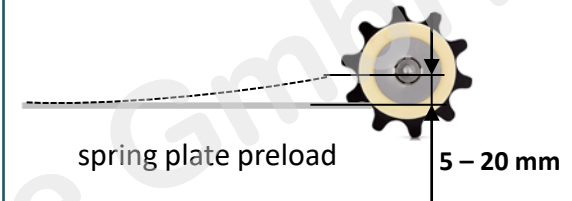

Installation details:

Make sure the roller is running parallel to the chain.

Lubrication sprockets are also available without spring plate